

Broksonic combo service menu:

Press Volume Down Until At zero Continue Holding And Press Channel Up Or Down On Remote. Use Volume Up And Down To Set Parameters. Press 8 On Remote To Exit.

Daewoo:

Use Remote 1-Mute-Display-Mute, From Service Menu Select With Channel Key And Adjust With Volume Key

Panasonic:

Method 1 For Chassis Amedp, Apedp, Aredp ...

1. Press Action (Tv Turned On)
2. Select Set-Up Icon, Set Antenna To Cable
3. Select Timer Icon, Set Sleep Timer To 30
4. Press Action Twice To Exit Menus And Tune To Channel 124
5. Adjust Volume To 0
6. Press Vol - On Tv Control Panel And Red 'Chk' Will Appear In The Upper Left Corner
7. To Toggle Between Serviceman And Aging Modes Press Action And Vol + Simultaneously On The Control Panel
8. The Set Is Now In Serviceman Mode, Press Power On Remote To Select One Of The Five Serviceman Adjustment Modes:
 - B = Vcj Sub Adjustments
 - C = Vcj Cut-Off Adjustments
 - S = Options (Pip And Clock Adjustments)
 - M = Mts Adjustments'Chk' = Normal Operation Of Channel And Volume Controls
9. Press Chan Up / Down On Remote To Select An Item
10. Press Vol Left / Right To Adjust

Method 2

1. Short Test Point Fa1 To Cold Ground Fa2 (A-Board: Tp Pin 8 To Pin 3)
2. Receiver Is In Aging Mode With Yellow 'Chk' In The Upper-Left Corner
3. Press Action And Vol+ Simultaneously On The Control Panel And 'Chk' Should Be In Red
4. The Set Is Now In Serviceman Mode, Press Power On Remote To Select One Of The Five Serviceman Adjustment Modes:
 - B = Vcj Sub Adjustments
 - C = Crt Adjustments
 - D = Pincushion Adjustments
 - S = Options Adjustments (Pip And Clock)
5. Press Chan Up / Down On Remote To Select An Item
6. Press Vol Left / Right To Adjust
7. Press And Hold Power And Action For A Few Seconds To Save And Exit Service Mode. Set Will Turn Off And Then Back On By Itself

Method 3 Tx-W28r3 (And Similar Models)

1. Set Bass To Maximum Position, Set Treble To Minimum Position
2. Press Reveal On The Remote Control And At The Same Time Press Volume On The Tv. This Will Place The Tv Into The Service Mode
3. Press The Red / Green Buttons To Select An Item
4. Press The Yellow / Blue Buttons To Adjust
5. Press Store On The Preset Panel After Each Adjustment Has Been Made

To Store The Required Values

6. To Exit The Service Mode, Press Normalization

Samsung

Power Off The Set.

On The Remote Press [Mute] Then [1] Then [8] Then [2] Then [Power] In Sequence Quickly.

Reset Is Handy For All But Geometry Functions, And They Can Be Found Under The (Adjustment) Menu

Symphonic:

From Remote: [Power Off] [2] [7] [1] [Mute] quickly pressed in order allowsThe Set to Power Up In The Service Mode.